


FOO CART RADIO OPERATION INSTRUCTIONS

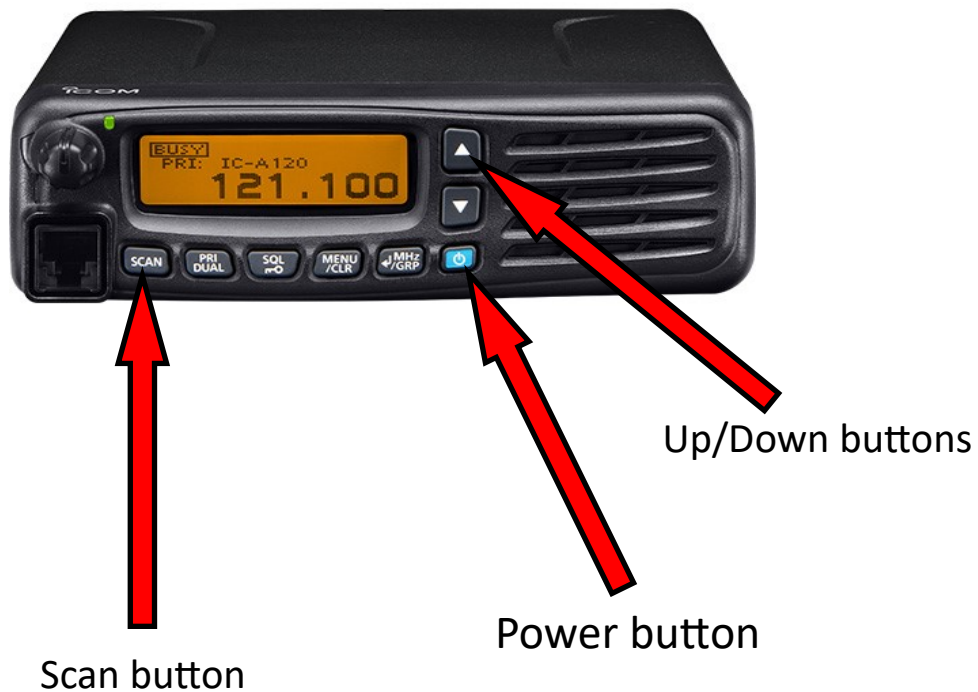

The radio has three memory channels set. Glider is frequency 123.3. KSYN CTAF frequency 122.8. KSYN AWOS is 119.35. It is best to operate in scan mode to monitor both 122.8 and 123.3. When you remove the mic from its holder the scan will stop on the current frequency. If that's not the one you want to transmit on use the up/down buttons to ensure the correct frequency is set. When the mic is returned to the holder scanning should automatically resume.

Steps to radio operation

1. Place the magnetic base of the antenna on a metal door hinge.
2. Push power button to turn radio on.
3. Look at display and see if radio is scanning between 122.8 and 123.3. It will be evident by "Scan" displayed in upper right corner of the display as well as the changing channel number on the bottom center.
4. If radio is not scanning push the scan button to enter the scan mode.
5. You can exit scan mode by simply removing the mic from its holder. After removing the mic check which frequency is selected. To transmit on Glider 123.3 or KSYN CTAF 122.8 or listen to KSYN AWOS 119.35 use the up/down buttons to select your desired frequency. After transmissions or listening are complete return the mic to the holder and the scan mode should automatically resume.
6. Power off radio by holding down the power button.